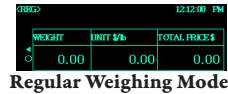 


LP-II Advanced User's Guide

Main Menu

To enter the main menu from the regular weighing mode, press or .



Temporary Date Change

In regular weighing mode, can be used temporarily to change the current date (packed on date). To activate this feature, the scale must be in REG (Regular), MGR (Manager), or RPK (Repack) mode.

Press

Press

Set: Set Temporary Date

Enter the year, month, and day settings.

Press

The screen will return to the normal weighing sales mode. The date display will be preceded by an arrowhead symbol, indicating it is in a temporarily changed state.

To return to the normal date, press , followed by .

Speed Keys

From the Main Menu:

Press for *PLU: Program PLUs*

Enter password if required (default is 001)

Press for *PLU Speed Keys*

Press the desired Speed Key on the Alpha Keypad located on the left side of the scale.

(Press for speed keys above 56)

Press

Type in the PLU Number.

Press

Continue to the next speed key.

When finished, press .

Scrolling Messages

From the Main Menu:

Press for *SET: Settings*

Enter password if required (default is 001)

Press .

Press for *Scrolling Messages*

Type in the message number

Press .

Type in the message you wish to display

Press .

The next available message number will be displayed. If message programming is complete, then press or to return to *SET: Settings*.

Press for *Scrolling Sequence*

Type in the scale number

Press .

Type in the scroll delay time (0 = No scrolling message). Type in the number of seconds

Press .

Audit Trail

The AUDIT TRAIL function allows a user to track PLU price changes by date, time, and clerk IK (if applicable).

From the Main Menu:

Press for *PLU: Program PLUs*

Press *PLU Management*

Press *Audit Trail PLUs*

Use and to scroll through the report.

Press to exit

Type in the message number

Press .

Type in the message effect

(0 = Scroll • 1 = Scroll + Flash • 2 = Curtain Effect • 3 = Curtain + Flash)

Press .

When finished, press .

Press or to return to the main menu.

LP-II Advanced User's Guide

Discount/FSP (Frequent Shopper Program)

This combination of features allow the user to establish specific time periods (by date, day of the week, and hours/minutes) and apply pre-determined discounts to specific products, either on a promotional basis or as part of a FSP special.

Create the discount time periods and data

From the main menu:

Press **4** for *PLU: Program PLUs*

Press **5** for *PLU:Discount/FSP*

Press **1** for *PLU:Discount/FSP period*

Each period will be identified by a unique number and delineated by a from and to date and a from and to time. Use **PRINT** or **ENTER** to advance through the screens as you enter data.

Each Discount/FSP period allows the user to enable or disable that period by specific day of the week.

Press **0** to enable or **1** to disable at the WEEK:(111111) entry. The days run from Sunday to Saturday. (111101) would be enabled every day except Friday.

Press **SAVE** to advance to the next template.

Press **MENU** to return to *PLU:Discount/FSP*

Press **2** for *PLU:Discount/FSP Data*

Each discount is assigned a unique Code #.

Remark: Enter a description of the discount

Target Type:

Enter 0 if the discount applies to By Weight PLUs

Enter 1 for By Count PLUs

Price Type:

Enter 0 if the discount applies to the Unit Price

Enter 1 if the discount applies to the Total Price

Enter 2 if the discount applies as a percentage of the price

If the discount is for a "By Weight" PLU:

At Sale Weight 1:

Enter the weight at which the first price reduction takes effect (You can enter up to two "trigger points" and two price reductions per discount)

At Sale Weight 2:

Enter the second trigger point

At Disc/FSP Price 1:

(Either the unit price or the total price depending on the basis of the discount)

Enter the discounted price that applies at Sale Weight 1

At Disc/FSP Price 2:

Enter the price that applies at weight 2

If the discount is for a "By Count" PLU:

Follow the instructions above, but enter the count information and discounted prices.

Global Discount/FSP

From the main menu:

Press **9** for *Global Settings*

Enter password (default is 001)

Press **ENTER**

Press **2** for *Discount/FSP*

Enter the values of the discount or frequent shopper program.

Press **ENTER**

Press **Y** if you wish to use this discount for ALL PLUs, or **N** if you want to apply this Label Format to this PLU only.


Press **ENTER**

Press **ESC**

LP-II Advanced User's Guide

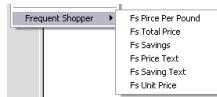
Frequent Shopper Program Labels

LP-II software version 2.14 and above supports the Frequent Shopper Program. As part of this program, products tagged as eligible for the FSP can be labeled with a different label than the global label assigned to the scale.

To create a FSP label, open the Label Editor  and create a new label.

Press the Label Fields drop down menu.

The FSP specific fields (prices and text have been added to the bottom of the menu). Use these fields to create your FSP Label.



Or create your FSP label using the graphic buttons located on the lower right of the Label Editor.



Assign the label a number and save it.
Download the label to the scale.

At the scale

From the Main Menu:

Press **9** for *Global Settings*

Enter password (default is 001)

Press **2** for *Discount/FSP*

Set Discount/FSP priority to 1

Set FSP Label Format Number to the label number you just created.

Press 

Lost Password

From the Main Menu:

Press 

The display will show an 8 digit number. Divide the 8 digit by 4. Take the last 6 digits of the result and multiply by 1743. The result = nnnNNNNN. The temporary password = 00 and the last five digits of nnnNNNNN.

Example:

8 digit number from scale - 80240808

$80240808 / 4 = 20060202$

$060202 \times 1743 = 104932086$

Temporary Password = 0032086

Print Inhibit

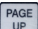 

From the Main Menu:


Press **7** for *SET: Settings*

Enter password (default is 001)

Press 

Press **1** for *Print Inhibiting*

The scale will display all possible items that can be printed on a label. Use  and  or the arrow keys to find what item you would like to inhibit. Press **Y** to not print line item. Press **N** to print line item.

When finished, press 

Press 

Sell Time Print Mode

This feature allows the user to print a single alphabetic character on the label to correspond to the time of day the label was created, usually when the item was packed.

From the Main Menu:

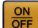 
Press **4** for *PLU: Program PLU's*

Press **6** for *PLU Management*

Press **5** for *Sell-Time Print Mode*

Use **Y** and **N** on the alpha keypad to toggle this feature on and off.

Temporary Date Print Inhibit

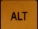 

In regular weighing mode,  can be used to temporarily inhibit the printing of dates on labels. Make sure the scale is in REG, MGR, or RPK mode.

Press 

Press 

A menu will show the headings PACKED ON, SELL BY, and COOK BY. Enter **Y** or **N** on the alpha keypad for each choice. "N" = Will Print, "Y" = Won't Print

Press 

Once the screen returns to the sales mode, the display will show DATE INHIBIT. Pressing  followed by  will cancel the Print Inhibit.

LP-II Advanced User's Guide

LP-II Scale to Scale Transfer

For the purposes of this procedure, the scale being copied FROM is referred to as the OLD scale. The scale being copied TO is referred to as the NEW scale.

NOTE: Must be same scale versions

Connect a crossover cable between the ethernet port of the old scale and the new scale.

AT THE NEW SCALE:

Enter Calibration Mode (Hold  while you power up from the side)

At the calibration main menu:

Press  for *Network Options*

Select options:

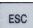 

Network is used? = Y

PC Master is used? = N

Clerk mode = 0

This is scale number? = 2

Press 

Press  or  to return to normal weighing mode.

AT THE OLD SCALE:

Enter Calibration Mode (Hold  while you power up from the side)

At the calibration main menu:

Press  for *Network Options*

Select options:

Network is used? = Y

PC Master is used? = N

Clerk mode = 0

This is scale number? = 1

Press 

Press  or  to return to the main menu. (Not Calibration Mode)

Press  for *Network Management*

Press  for *Network Copy*

At the copy data menu, select what you want to copy to the new scale. Follow the prompts to complete the process.

If you select 1 for Cloning, you'll copy the entire scale profile: PLU's, Store Name, and other global data and label formats. Be careful the NEW scale doesn't have a custom label format loaded.

If you copy a format with the same number from the OLD scale, the format in the NEW scale will be replaced.