

***CASLink provides an optical serial connection to the front of a CASLink capable indicator (R400 Series, X320)***

Two CASLink cables are available:

- C10005 Serial Connector
- C10012 USB Connector

When using a USB CASLink cable for the first time on a PC, the driver will have to be loaded. Connect the USB (or DB9) end of CASLink to the PC and optical head to unit for connection.

**Driver Support:**

The current CASLink drivers will support the following Windows operating systems both 32bit and 64bit:

- Windows XP SP2 and above
- Windows Vista
- Windows 7
- Windows 8 and 8.1

**Note:**

The older XA chipset in the CASLink is not supported by Windows 8 or 8.1. When using an older device, you will get a Windows Error Code 10. This is a hardware issue. It is recommended upgrading your CASLink to the new TA chipset CASLink.

The TA chipset CASLink can be distinguished by the short heat shrink sheath over the cable exiting the CASLink magnetic head as shown in the picture below.

